



# **HUAWEI FC612E**

---

**Cordless Phone**

**USER GUIDE**

**Copyright © Huawei Technologies Co., Ltd. 2012. All rights reserved.**

No part of this document may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd.

The product described in this manual may include copyrighted software of Huawei Technologies Co., Ltd. and possible licensors. Customers shall not in any manner reproduce, distribute, modify, decompile, disassemble, decrypt, extract, reverse engineer, lease, assign, or sublicense the said software, unless such restrictions are prohibited by applicable laws or such actions are approved by respective copyright holders under licenses.

## **Trademarks and Permissions**



**HUAWEI**, **HUAWEI**, and  are trademarks or registered trademarks of Huawei Technologies Co., Ltd.

Other trademarks, product, service and company names mentioned are the property of their respective owners.

## **Notice**

Some features of the product and its accessories described herein rely on the software installed, capacities and settings of local network, and may not be activated or may be limited by local network operators or network service providers, thus the descriptions herein may not exactly match the product or its accessories you purchase.

Huawei Technologies Co., Ltd. reserves the right to change or modify any information or specifications contained in this manual without prior notice or obligation.

## **NO WARRANTY**

THE CONTENTS OF THIS MANUAL ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO CASE SHALL HUAWEI TECHNOLOGIES CO., LTD. BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOST PROFITS, BUSINESS, REVENUE, DATA, GOODWILL OR ANTICIPATED SAVINGS.

## Import and Export Regulations

Customers shall comply with all applicable export or import laws and regulations and will obtain all necessary governmental permits and licenses in order to export, re-export or import the product mentioned in this manual including the software and technical data therein.

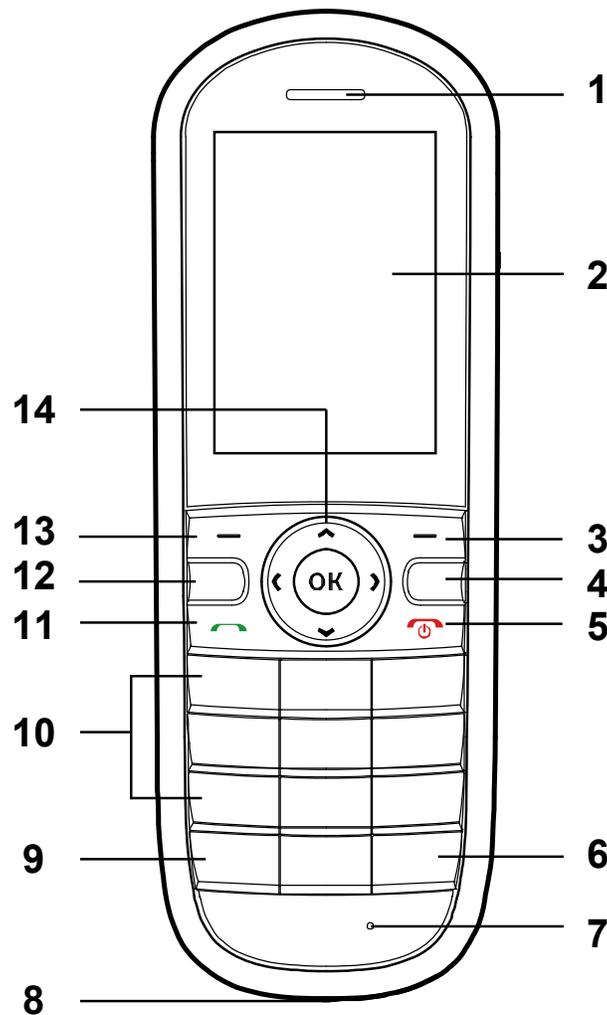
## Getting Started

---

### Front View

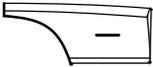
 **Note:**

The following figure shows the front view of your phone and is provided for your reference only.



No.	Description	No.	Description
1	Earpiece	2	Screen
3	Right soft key	4	Clear key
5	End key	6	# key
7	Microphone	8	Charger jack
9	* key	10	Number keys
11	Call key	12	Profile key
13	Left soft key	14	Navigation keys

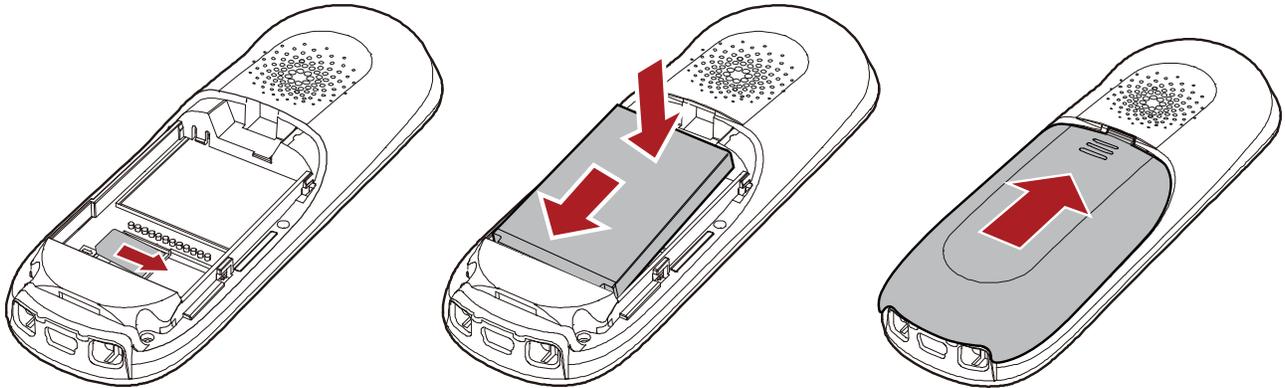
## Keys

Press ...	To ...
Right soft key 	Select the option displayed in the lower right corner of the screen.
Clear key 	Delete the character to the left of the cursor.
End key 	<ul style="list-style-type: none"> <li>• End or reject a call.</li> <li>• Power on or off the phone (by pressing and holding the key).</li> <li>• Return to the standby screen.</li> </ul>

Press ...	To ...
Number keys	<ul style="list-style-type: none"> <li>• Enter digits or characters (by pressing the <b>0–9</b> keys).</li> <li>• Speed-dial phone numbers in standby mode (by pressing and holding the <b>2–9</b> keys).</li> <li>• Call the voicemail in standby mode (by pressing and holding the <b>1</b> key).</li> </ul>
Call key 	<ul style="list-style-type: none"> <li>• Dial a number or answer a call.</li> <li>• View the call log in standby mode.</li> </ul>
Profile key 	Access <b>Profiles</b> in standby mode.
Left soft key 	Select the option displayed in the lower left corner of the screen.
Navigation keys 	<ul style="list-style-type: none"> <li>• Access the functions for which shortcuts are predefined in standby mode.</li> <li>• Adjust the volume during a call.</li> <li>• Access the main menu in standby mode (by pressing the <b>OK</b> key).</li> <li>• Switch between the hands-free mode and the hand-held mode during a call (by pressing the <b>OK</b> key).</li> </ul>

## Installing the SIM Card and the Battery

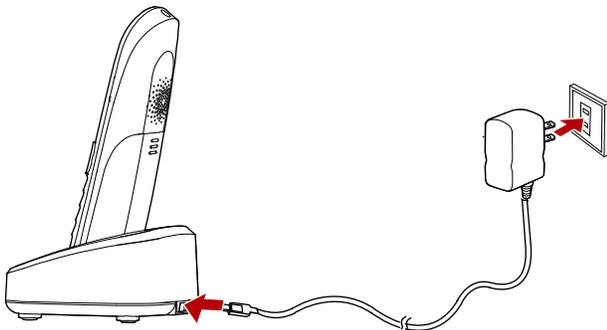
When installing the subscriber identity module (SIM) card, ensure that the golden contact area on the SIM card is facing downward and that the beveled edge of the SIM card is properly aligned with that of the SIM card slot. Contact your service provider to check whether the SIM card is required on the phone.



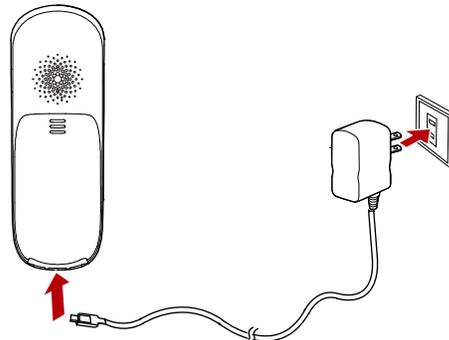
## Charging the Battery

You can use either of the following methods as required to charge the battery:

- Method 1:



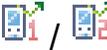
- Method 2:



### Note:

- If the phone is not going to be used for a long time, remove the battery from the phone.
- If the battery has not been used for a long time, or if the battery power has been used up, the phone will not display anything on the screen. The phone can be powered on and used only after the battery is charged for some time.

## Screen Icons

Icon	Indicates ...	Icon	Indicates ...
	Signal strength.		Battery power level.
	A call is being set up or there is an ongoing call.		An alarm is enabled.
	Unread text messages.		Unread multimedia messages.
	Unread voice messages.		The <b>Normal</b> profile is enabled.
	2G network.		3G network.
	Line 2.		<ul style="list-style-type: none"> <li>All calls will be forwarded.</li> <li>Line 1/2.</li> </ul>

## Accessing a Function Menu

To access a function menu, do as follows:

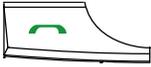
1. In standby mode, press  to access the main menu.
2. Press the navigation keys to select a function menu.
3. Press  to access the selected menu.
4. Press the up or down navigation key to select a submenu, and then press  to access the selected submenu.
5. Press  to return to the upper-level menu or exit the function menu.
6. Press  to return to the standby screen.

# Voice Services

## Making a Call

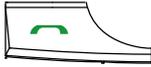
### Making a Call Directly

To make a call, do as follows:

1. In standby mode, press the number keys to enter a phone number.
2. Press  to dial the number.
3. Press  to end the call or cancel the dialing.

### Making a Call from Contacts

To make a call from **Contacts**, do as follows:

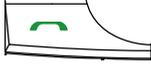
1. In standby mode, select **Menu > Contacts**.
2. Find the desired contact, and then press  to dial the number.

#### **Note:**

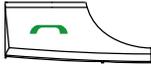
In **Contacts**, you can also create, search for, or delete a contact.

### Making a Call from the Call Log

To make a call from the call log, do as follows:

1. In standby mode, select **Menu > Calls** or press  to display the missed calls, received calls, and dialed numbers.
2. Find the desired number, and then press  to dial the number.

## Answering or Rejecting a Call

When there is an incoming call, you can press  to

answer the call; press  to mute the ringtone; press  to reject the call.

## Messaging

---

### Creating a Message

To create a message, do as follows:

1. Select **Menu > Messaging > Create message**.
2. When writing a message, do as follows:
  - Press the down navigation key to insert pictures, video clips, recorded audio clips, or other audio clips into the message.
  - Select **Options** to perform operations available in the menu.
3. Press the **OK** key to enter the numbers of recipients.
4. Press the **OK** key to send the message.

### Reading a Message

**Inbox** stores the received messages. To read a message, do as follows:

1. Select **Menu > Messaging > Inbox**.
2. Press the up or down navigation key to view the message list.
3. Press the **OK** key to read the selected message.
4. Select **Options** to reply to, forward, or delete the message or call the message sender.

# Entering Text

---

## Note:

- Press the \* key to switch between the text entry modes. In **ABC**, **Abc**, or **abc** mode, you can press and hold the \* key to enable or disable the **T9** mode.
- Press the # key to display the symbol list, and then you can select and enter different symbols. Press and hold the # key to change the input language.
- In the editing state, you can press  to delete the character to the left of the cursor.
- In **Abc**, **ABC**, or **abc** mode, you can press the **0** key to enter a space.
- In **Abc**, **ABC**, or **abc** mode, you can press the **1** key consecutively to enter a commonly used symbol.

## Entering Text in T9 Mode

In **T9** mode, you can enter an English word as follows:

1. Press each number key only once according to the spelling sequence of the desired word. Then the phone displays the candidate words that contain the entered letters.
2. Press the up or down navigation key to select the desired word.
3. Press the left or right navigation key to confirm the selection and enter the word. You can also press the **0** key to confirm the selection and enter the word followed by a space.

## Entering Text in ABC, Abc or abc Mode

In **Abc**, **ABC** or **abc** mode, you can press the number key labeled with the desired letter or digit consecutively until the

desired letter or digit appears on the display. If the letter you want to enter is on the same key as the previous letter, enter the letter after the cursor appears again.

## Entering a Digit

In **123** mode, directly press the number key labeled with the desired digit.

## Network Mode

---

### Switching Between Network Modes

To switch between network modes, do as follows:

1. Select **Menu > Settings > Network > Mode**.
2. Press the up or down navigation key to set the network mode as required.
3. Press  to save the settings.

## Music

---

To play music, do as follows:

Select **Menu > Music** to access the music list, and then select the music you want to play.

During music playing, do as follows:

- Press the navigation keys to perform relevant operations according to the icons on the screen.
- Select **Options** to perform operations as required.

## Calendar

---

To view the calendar, do as follows:

1. Select **Menu > Calendar**, and then scroll to the desired date.
2. Do as follows:
  - Press the **OK** key to view the corresponding schedule of the date.
  - Select **Options** to add a reminder, jump to a specified date, view undue reminders, search for a schedule, or set the display mode.

## Alarms

---

To enable an alarm, do as follows:

1. Select **Menu > Tools > Alarms**.
2. Select the desired alarm in the existing list, and then press the **OK** key to set the alarm.
3. Press  to save the settings.

## Browser

---

Select **Menu > Browser** to perform operations as required. The browser on your phone allows you to access various Internet services conveniently.

## Security Settings

---

### Phone Lock

The phone lock can protect your phone against unauthorized

use. By default, the phone lock is disabled. You can change the default phone lock code (**0000**) to a number of one to eight digits.

If the phone lock is enabled, the phone prompts you to enter the phone lock code each time you power on the phone. In this case, you need to enter the correct phone lock code to use the phone.

## **PIN and PUK**

The personal identification number (PIN) can protect your SIM card against unauthorized use. The PIN unblocking Key (PUK) is used to unlock the blocked PIN. If you enter wrong PINs consecutively for specified times, the SIM card is blocked. In this case, you need to enter the PUK to unblock the SIM card. The PIN and the PUK are provided with your SIM card. For details, contact your service provider.

## **Keypad Lock**

In standby mode, press and hold the \* key to lock the keypad. If the keypad is locked, unlock the keypad first. Otherwise, you can only dial emergency numbers and answer incoming calls.

In standby mode, press the **OK** key and then the \* key to unlock the keypad.

## **Warnings and Precautions**

---

This section contains important information pertaining to the operating instructions of your device. It also contains information about how to use the device safely. Read this information carefully before using your device.

### **Electronic Device**

Power off your device if using the device is prohibited. Do not use the device when using the device causes danger or

interference with electronic devices.

## **Medical Device**

- Follow rules and regulations set forth by hospitals and health care facilities. Do not use your device when using the device is prohibited.
- Pacemaker manufacturers recommend that a minimum distance of 15 cm be maintained between a device and a pacemaker to prevent potential interference with the pacemaker. If you are using a pacemaker, use the device on the opposite side of the pacemaker and do not carry the device in your front pocket.

## **Potentially Explosive Atmosphere**

Power off your device in any area with a potentially explosive atmosphere, and comply with all signs and instructions. Areas that may have potentially explosive atmospheres include the areas where you would normally be advised to turn off your vehicle engine. Triggering of sparks in such areas could cause an explosion or a fire, resulting in bodily injuries or even deaths. Do not power on your device at refueling points such as service stations. Comply with restrictions on the use of radio equipment in fuel depots, storage, and distribution areas, and chemical plants. In addition, adhere to restrictions in areas where blasting operations are in progress. Before using the device, watch out for areas that have potentially explosive atmospheres that are often, but not always, clearly marked. Such locations include areas below the deck on boats, chemical transfer or storage facilities, and areas where the air contains chemicals or particles such as grain, dust, or metal powders. Ask the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) whether this device can be safely used in their vicinity.

## **Traffic Security**

Observe local laws and regulations while using the device. In

addition, if using the device while driving a vehicle, comply with the following guidelines:

- Concentrate on driving. Your first responsibility is to drive safely.
- Do not talk on the device while driving. Use hands-free accessories.
- When you have to make or answer a call, park the vehicle at the road side before using your device.
- RF signals may affect electronic systems of motor vehicles. For more information, consult the vehicle manufacturer.
- In a motor vehicle, do not place the device over the air bag or in the air bag deployment area. Otherwise, the device may hurt you owing to the strong force when the air bag inflates.
- Do not use your device while flying in an aircraft. Power off your device before boarding an aircraft. Using wireless devices in an aircraft may cause danger to the operation of the aircraft and disrupt the wireless telephone network. It may also be considered illegal.

## **Operating Environment**

- Do not use or charge the device in dusty, damp, and dirty places or places with magnetic fields. Otherwise, it may result in a malfunction of the circuit.
- The device complies with the RF specifications when the device is used near your ear or at a distance of 1.5 cm from your body. Ensure that the device accessories such as a device case and a device holster are not composed of metal components. Keep your device 1.5 cm away from your body to meet the requirement earlier mentioned.
- On a stormy day with thunder, do not use your device when it is being charged, to prevent any danger caused by lightning.

- When you are on a call, do not touch the antenna. Touching the antenna affects the call quality and results in increase in power consumption. As a result, the talk time and the standby time are reduced.
- While using the device, observe the local laws and regulations, and respect others' privacy and legal rights.
- Keep the ambient temperature between 0°C and 45°C while the device is being charged. Keep the ambient temperature between -10°C to 55°C for using the device powered by a battery.

## **Prevention of Hearing Damage**

Using a headset at high volume can damage your hearing. To reduce the risk of damage to hearing, lower the headset volume to a safe and comfortable level.

## **Safety of Children**

Comply with all precautions with regard to children's safety. Letting the child play with your device or its accessories, which may include parts that can be detached from the device, may be dangerous, as it may present a choking hazard. Ensure that small children are kept away from the device and accessories.

## **Accessories**

Use the accessories delivered only by the manufacturer. Using accessories of other manufacturers or vendors with this device model may invalidate any approval or warranty applicable to the device, result in the non-operation of the device, and cause danger.

## **Battery and Charger**

- Unplug the charger from the electrical plug and the device when not in use.
- The battery can be charged and discharged hundreds of times before it eventually wears out. When the standby time

and the talk time are shorter than the normal time, replace the battery.

- Use the AC power supply defined in the specifications of the charger. An improper power voltage may cause a fire or a malfunction of the charger.
- Do not connect two poles of the battery with conductors, such as metal materials, keys, or jewelries. Otherwise, the battery may be short-circuited and may cause injuries and burns on your body.
- Do not disassemble the battery or solder the battery poles. Otherwise, it may lead to electrolyte leakage, overheating, fire, or explosion.
- If battery electrolyte leaks out, ensure that the electrolyte does not touch your skin and eyes. When the electrolyte touches your skin or splashes into your eyes, wash your eyes with clean water immediately and consult a doctor.
- If there is a case of battery deformation, color change, or abnormal heating while you charge or store the battery, remove the battery immediately and stop using it. Otherwise, it may lead to battery leakage, overheating, explosion, or fire.
- If the power cable is damaged (for example, the cord is exposed or broken), or the plug loosens, stop using the cable at once. Otherwise, it may lead to an electric shock, a short circuit of the charger, or a fire.
- Do not dispose of batteries in fire as they may explode. Batteries may also explode if damaged.
- Danger of explosion if battery is incorrectly replaced. Recycle or dispose of used batteries according to the local regulations or reference instruction supplied with your device.

## Cleaning and Maintenance

- The device, battery, and charger are not water-resistant. Keep them dry. Protect the device, battery, and charger from water or vapor. Do not touch the device or the charger with a wet hand. Otherwise, it may lead to a short circuit, a malfunction of the device, and an electric shock to the user.
- Do not place your device, battery, and charger in places where they can get damaged because of collision. Otherwise, it may lead to battery leakage, device malfunction, overheating, fire, or explosion.
- Do not place magnetic storage media such as magnetic cards and floppy disks near the device. Radiation from the device may erase the information stored on them.
- Do not leave your device, battery, and charger in a place with an extreme high or low temperature. Otherwise, they may not function properly and may lead to a fire or an explosion. When the temperature is lower than 0°C, performance of the battery is affected.
- Do not place sharp metal objects such as pins near the earpiece. The earpiece may attract these objects and hurt you when you are using the device.
- Before you clean or maintain the device, power off the device and disconnect it from the charger.
- Do not use any chemical detergent, powder, or other chemical agents (such as alcohol and benzene) to clean the device and the charger. Otherwise, parts of the device may be damaged or a fire can be caused. You can clean the device and the charger with a piece of damp and soft antistatic cloth.
- Do not dismantle the device or accessories. Otherwise, the warranty on the device and accessories is invalid and the manufacturer is not liable to pay for the damage.

## **Emergency Call**

You can use your device for emergency calls in the service area. The connection, however, cannot be guaranteed in all conditions. You should not rely solely on the device for essential communications.

## **Certification Information (SAR)**

This device meets guidelines for exposure to radio waves.

Your device is a low-power radio transmitter and receiver. As recommended by international guidelines, the device is designed not to exceed the limits for exposure to radio waves. These guidelines were developed by the independent scientific organization International Commission on Non-Ionizing Radiation Protection (ICNIRP) and include safety measures designed to ensure safety for all users, regardless of age and health.

The Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy absorbed by the body when using a device. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the device when being operated can be well below the value. This is because the device is designed to use the minimum power required to reach the network.

The SAR limit adopted by USA and Canada is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The highest SAR value reported to the FCC and IC for this device type when tested for use at the ear is 1.12 W/kg, and when properly worn on the body is 0.651 W/kg.

The SAR limit also adopted by Europe is 2.0 W/kg averaged over 10 grams of tissue. The highest SAR value for this device type when tested at the ear is 0.792 W/kg, and when properly worn on the body is 0.452 W/kg.

## Disposal and Recycling Information



This symbol (or without a solid bar) on the device, and/or on its packaging, and on its batteries where included, indicates that the device including its electrical accessories (e.g. headset, adapter, cable) and the batteries should not be disposed of as normal household garbage. These items should not be disposed as unsorted municipal waste and should be handed over to a certified collection point for recycling or proper disposal at the end of their life.

For more detailed information about the recycling of the device or batteries, please contact your local city office, the household waste disposal service, or the retail store where you purchased it/them.

Disposal of the device and batteries if included is subject to WEEE Directive Recast (Directive 2012/19/EU) and Battery Directive (Directive 2006/66/EC). The purpose for separating WEEE and batteries from other waste is to minimize the potential environmental impacts on human health of any hazardous substances that may be present.

## Reduction of Hazardous Substances

This device is compliant with the REACH Regulation [Regulation (EC) No 1907/2006] and RoHS Directive Recast (Directive 2011/65/EU). Batteries where included are compliant with Battery Directive (Directive 2006/66/EC). For more information about the REACH and RoHS compliance of the device, please visit the Web site **[www.huaweidevice.com/certification](http://www.huaweidevice.com/certification)**. You are recommended to visit the Web site regularly for up-to-date information.

## EU Regulatory Conformance

Hereby, Huawei Technologies Co., Ltd. declares that this device is in compliance with the essential requirements and

other relevant provisions of Directive 1999/5/EC.

For the declaration of conformity, visit the Web site [www.huaweidevice.com/certification](http://www.huaweidevice.com/certification).

# CE0168

Notice: Observe the national local regulations in the location where the device is to be used. This device may be restricted for use in some or all member states of the European Union (EU).

## **FCC Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may

not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Changes or modifications made to this device not expressly approved by Huawei Technologies Co., Ltd. may void the FCC authorization to operate this device.

Please visit [www.huaweidevice.com/worldwide/support/hotline](http://www.huaweidevice.com/worldwide/support/hotline) for recently updated hotline and email address in your country or region.